



## HIGHMOUNT

**MODELS: HM7/16, HM7/24, HM7/30, HM7/35, HM7/45**

### INSTALLATION AND OPERATION INSTRUCTIONS

#### INSTALLATION INSTRUCTIONS

1. The top of the unit must be surface mounted on the wall with the bottom not less than 1.8 metres from the floor level.
2. For best heat distribution, the unit should preferably be positioned midway along the longest wall in the room ensuring that there are no obstructions directly in front of or below the heater.
3. Heater must not be mounted directly below a socket outlet.
4. Supply to the unit must be through a double pole isolator incorporated in the fixed wiring.
5. Remove the front cover and mount the heater frame to the wall via the four (4) mounting holes in the back plate of the unit. Ensure that there are sufficient studs or supports in the wall cavity behind the heater mounting position.
6. Bring the wiring into the unit and make the necessary connections. The requirements of the power Authority must be met.
7. Ensure the fan runs freely and replace the front cover.

#### OPERATING INSTRUCTIONS

Air is drawn into the heater through the top grill by a tangential fan, past the thermostat through the heating element and out the bottom grill creating a continuous cycle of warm air into the room.

The heater is automatically controlled by the preset thermostat, installed within the unit. This thermostat cycles the heat output of the unit from maximum down to a nominal level to achieve an overall stable, comfortable room temperature.

The heater is designed without the manual control to enable remote control of a number of units in Public Service or Institutional applications.

**IMPORTANT :** Appliance is not intended for use by young or infirm persons without supervision.  
**Do not restrict air into or out of the heater grills in any way.**

#### OPTIONAL CONTROL UNITS

1. HM7A is a remote variable thermostat with a 3hr. to off timer.
2. HM7B is a remote preset thermostat with a 3hr. to off timer.



## WARRANTY

During your first twelve months of ownership as the original purchaser of a PUREHEAT Electric Space Heater, Pureheat Sales Pty. Ltd. Guarantees that any part which is found defective in materials or workmanship will be repaired or replaced free of charge for the parts and service labour, provided that all service is performed by Pureheat Sales Pty. Ltd. Or by a Service Agent authorized by Pureheat Sales Pty. Ltd.

The Warranty does not cover failure due to accidental damage, misuse or negligence, over temperature cutouts nor does it cover any consequential damages. For the purpose of this Warranty, it is a condition that the wired-in models must be installed by a registered electrical contractor and must be wired in accordance with the wiring instructions. This warranty becomes void if the heater is serviced, repaired or altered by anyone other than Pureheat Sales Pty. Ltd. or it's authorised Service Agents or if other than approved parts have been used.

**Note: The heater warranty does not cover service calls related to incorrect operation resulting in over temperature safety devices over-heating and turning the heater off.**

Record the date of purchase below and retain this card, together with your purchase invoice. The, if you should ever require warranty service, you will have the necessary proof of purchase readily to hand. The benefits conferred by this Warranty are in addition to all other rights and remedies which the customer has under the Trade Practices Act and other legislation.

NAME : .....

ADDRESS : .....  
.....

PUREHEAT Model No : ..... Serial No : .....

Purchased From : .....

Installed : ..... Date Installed : .....

**PUREHEAT SALES PTY. LTD.**  
ACN 072 189 747  
76 Barry Road, New Gisborne, Victoria, Australia, 3438  
Telephone (03) 54281 502 Facsimile (03) 54284118